


1TT
170CP
180CP



Valvole termostatiche e termostaticabili
Thermostatic and thermostatisable radiator valves
Robinets thermostatiques et thermostatisables
Thermostatische Heizkörperventile

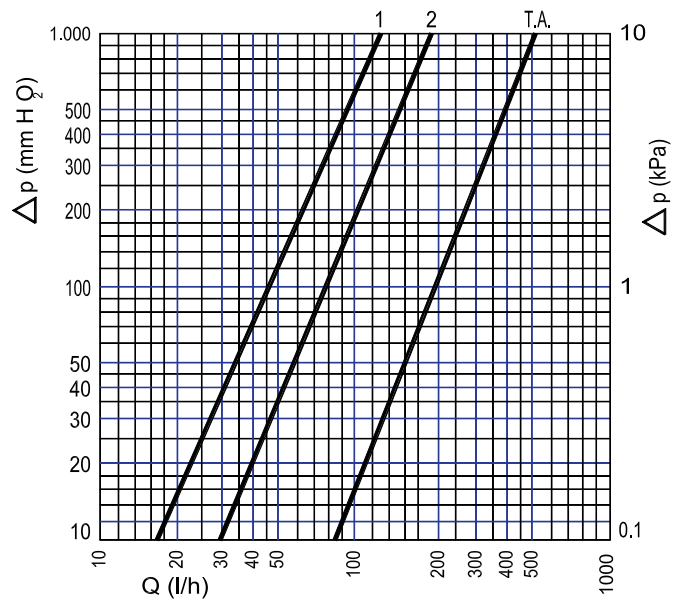

P.Max.	10 bar
T. Max.	110°C
Tempo di risposta Response time Temps de réponse Antwortzeit	22 min

Influenza della Pressione differenziale Differential pressure influence Influence de la pression différentielle Einfluss auf Differenzdruck	0.50 K	Isteresi, Hysteresis, Hystérésis, Hysteresis	0.40 K	<p>7°C 12°C 16°C 20°C 24°C 28°C</p>
Max. Pressione differenziale Max. Differential pressure Pression différentielle max. Differenzdruck max.	0.8 bar	Influenza della Temp. dell'acqua Water Temperature influence Influence de la Temp. du fluide Durchgangtemperatur Einfluß	0.45 K	
Autorità, Authority Autorité, Autorität	0.86	Portata Nominale, Nominal flow rate Debit, Druckfluß	190 l/h	
				Rotazione Vol. Protezione, 53°/ K Protection cap rotation, Rotation du capuchon de protection, Umdrehung der Schutzkappe

Montaggio - Assembling - Assemblage - Montage

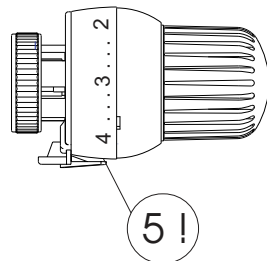
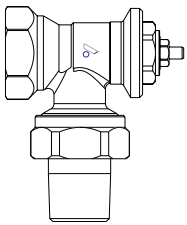


Durante l'estate è consigliabile regolare la testa in posizione tutto aperto (5).

Al'arrêt de la saison de chauffage, il est conseillé de ouvrir la tête thermostatique (position 5).

During summer time it is advisable to set the thermostatic head to completely open (position 5).

Während des Sommers dagegen empfiehlt sich die Stellung 5 mit voll geöffnetem Ventil.

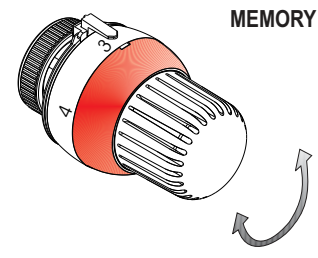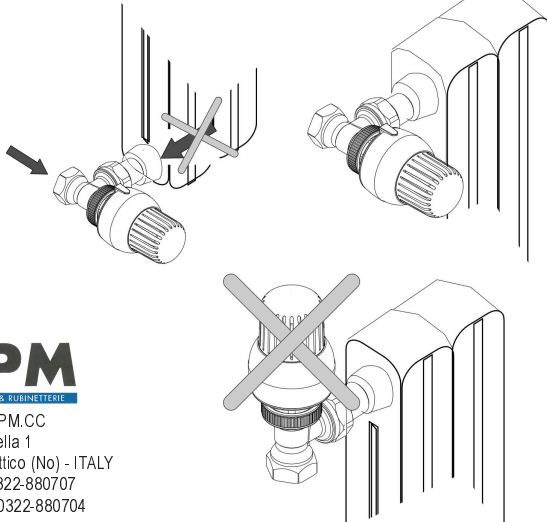

- MEMORY**
- selezionare la Temperatura ideale (1-5)
 - ruotare l'anello fino a far coincidere gli indicatori
 - set the right Temperature (1-5)
 - turn the upper ring till the pointer are on the same position
 - choisir la température sauhaitée (1-5)
 - tourner la bague jusqu'à ce que les deux indicateurs soient alignés
 - Die ideale Temperatur bestätigen
 - Den Ring drehen um die 2 Zeiger aufzustellen

Blocco della temperatura
Temperature Locking
Blocage de la température
Temperaturbegrenzer

- selezionare la posizione ideale (es.3)
- trascinare verso l'esterno il fermo
- set the right position (i.e. 3)
- move the locking device towards the external
- choisir la température sauhaitée (1-5)
- Pousser le dispositif de blocage vers l'estérieur
- Die ideale Position bestätigen
- Den Halter nach aussen ziehen

